



Reference Design Eval Kit STDP4320-RD5

RD5-4320

DisplayPort to HDMI Splitter

Kinetic Technologies cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Kinetic Technologies product. No intellectual property or circuit patent licenses are implied. Kinetic Technologies reserves the right to change the circuitry and specifications without notice at any time.



Contents

1. Purpose and Scope.....	4
2. Description	4
3. Set Up Instructions	5
4. Diagnosis.....	6
4.1. In-System Programming.....	6
5. Board Description.....	7
5.1. Principal Components and Functions.....	8
5.2. Connector Descriptions	9



List of Tables

Table 5.1-1. Principal Components and Functions 8

List of Figures

Figure 1. Connection Diagram: Video Hub Application 5
Figure 2. RD5-4320 Board Picture 7

1. Purpose and Scope

This document provides description and setup instructions for the STDP4320 evaluation board [RD5-4320 (400-652)] targeted for DisplayPort® Splitter applications.

2. Description

The STDP4320 is a high-speed DisplayPort™ dual mode splitter IC targeted for audio-videode-multiplexing and routing in applications such as notebooks, docking stations, video hub, 4K2K TVs, daisy chainable monitors, digital signage, etc.

The board consists of one dual mode input port and two dual mode output ports.

This board implements with test points, jumpers and potentiometers that are not required for the end customer applications, these are intended for convenience of functional test and validation purpose only. This board includes an SPI flash for storing firmware, an UART connector for debugging and In-system programming purpose (firmware download), two S/PDIF outputs, four I2C master interfaces and one I2C slave interface.

3. Set Up Instructions

The picture below [Figure 1] is a connection diagram showing the RD5-4320 board used for connecting a PC to two monitors. This board uses the standard DisplayPort connector recommended in the DP 1.2a specification to connect the DisplayPort input to the PC and standard HDMI connectors to HDMI TV/monitors.

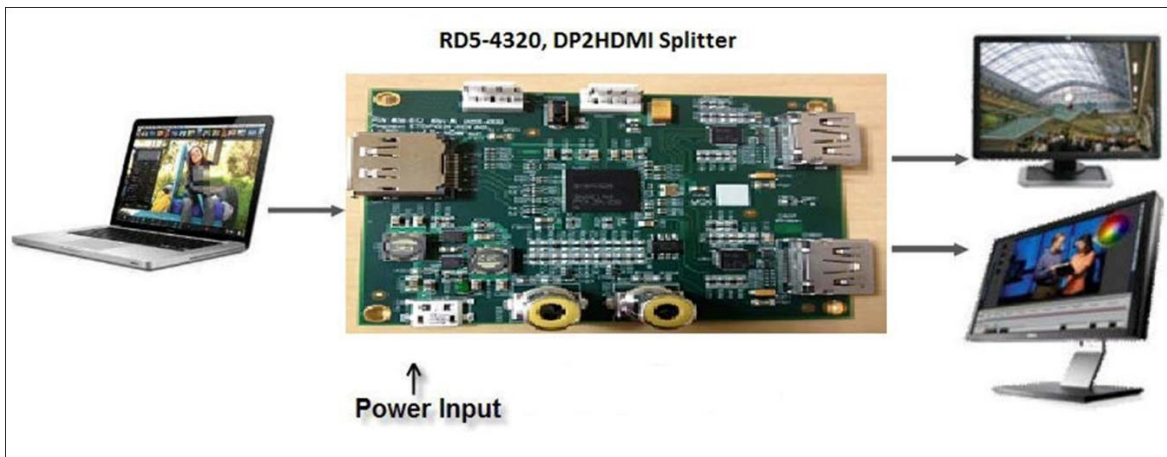


Figure 1. Connection Diagram: Video Hub Application

1. Connect the DisplayPort output from a PC/NB source to the DP input connector on RD5-4320 board using a DP cable and connect the two DisplayPort outputs to two DisplayPort 1.1a or 1.2a monitors using DP cables.
2. Connect Micro-USB port on the board to PC or USB power adapter for powering the board.
3. Optional: An active speaker can be connected to S/PDIF connector on the board for audio output if needed,
4. Once the connection is established, power ON the PC, monitor, RD5-4320 (DP Splitter) board. An image should pop up on the screen within 2-3 seconds. Configure the displays either in clone mode or extended mode through the Display settings on PC/NB.

4. Diagnosis

If the image does not come up, follow the steps below for diagnosis.

Note: The diagnosis requires the Kinetic GProbe software and hardware tool. Contact Kinetic for the GProbe software and board.

1. Install the Kinetic GProbe diagnostic tool on a computer and set the baud rate to 115,200.
2. Connect Kinetic GProbe board (not supplied) to the serial port (or USB port if using USB version) of the computer.
3. Connect the other end of the GProbe board to connector (CN501) on the RD5-4320 board using 4-wire cable (part of the GProbe board).

Note: CHECK POLARITY while connecting the cable; Pin 1 is marked on the board. The 4-wire cable connection from CN501 to GProbe board is 1 to 1.

4. Hit the Reset button on the board (RESET SW501). You will see the firmware version and date of firmware in the GProbe window. This indicates the STDP4320 IC is functional. If the message does not appear, reprogram the Flash using the ISP method described in the GProbe user guide.
5. Using an oscilloscope, check the video input and output from the STDP4320.

Note: Refer to the STDP4320 datasheet for more pin out descriptions.

4.1. In-System Programming

STDP4320 RD board uses SPI Flash to store the firmware. For new firmware upgrade, following method is recommended.

ISP through UART connector: Allows programming of the SPI Flash through UART (RS232) connector. GProbe board (RS232 converter circuit) and GProbe software tool are required. Please contact Kinetic for latest software and binary file.

5. Board Description

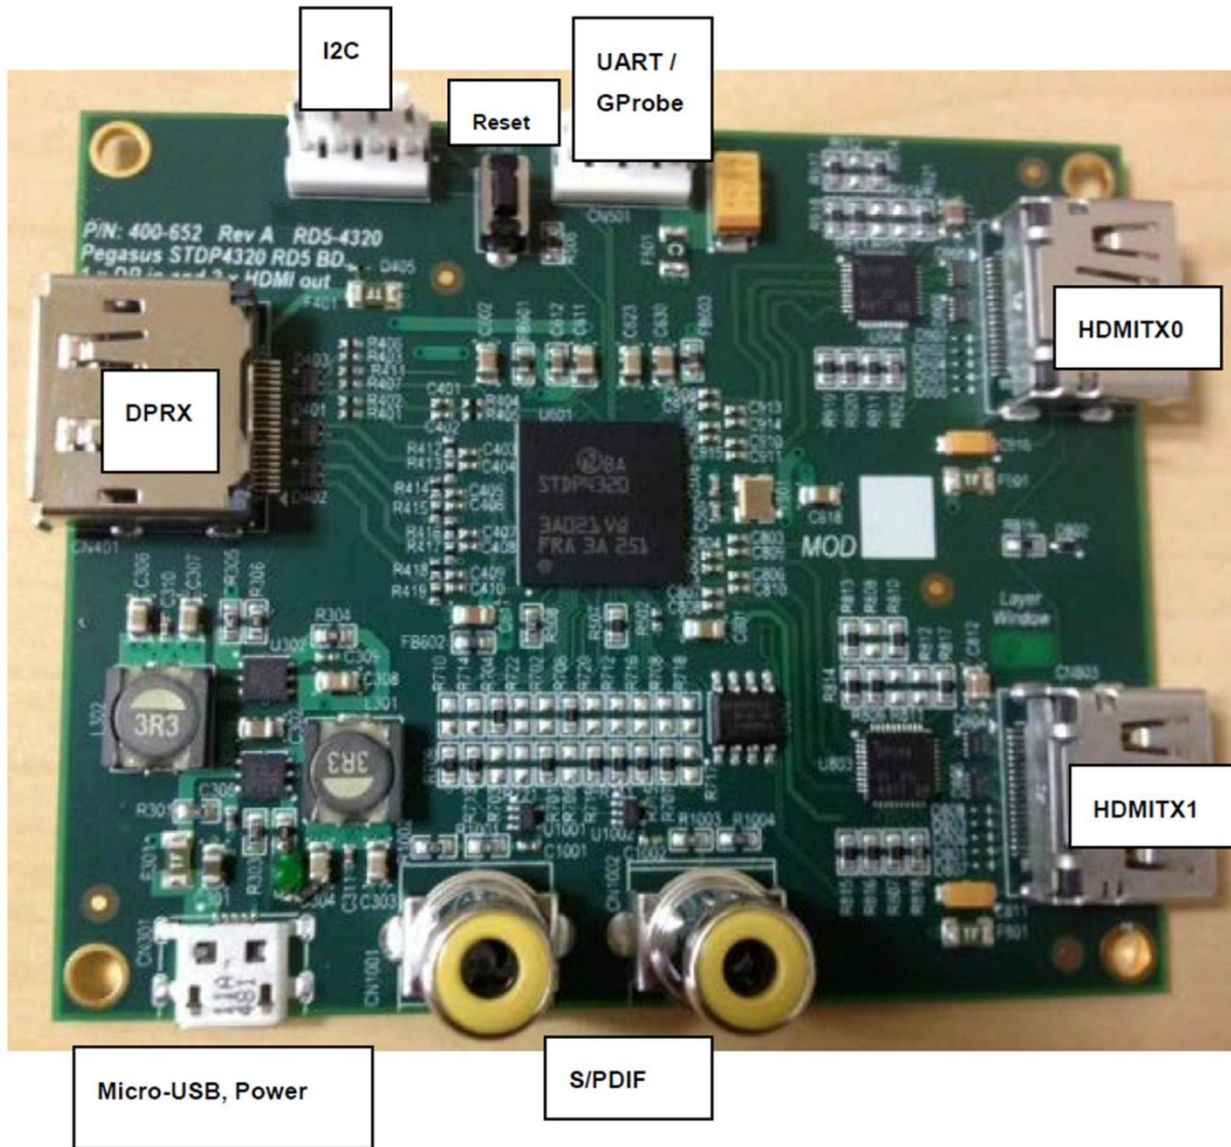


Figure 2. RD5-4320 Board Picture

5.1. Principal Components and Functions

Below is a summary of all necessary connectors, switches, and other components. Please refer to the latest board schematics for further details.

Table 5.1-1. Principal Components and Functions

Label	Description	RefDes
Power Input (+5V)	Input +5 V, down conversion to 3.3 V, and 1.2 V. This board uses two step-down switch regulators to generate 3.3 V and 1.2 V.	CN301
STDP4320	STDP4320 is a VESA DP Standard Ver. 1.2a compliant device that supports advanced features such as MST, HBR2 and 3D formats	U601
DP Input	DisplayPort input connector	CN401
HDMI Outputs	HDMITX output connectors	CN904 CN803
Flash	The board includes an SPI Flash of 2 MB to hold the firmware. The SPI Flash can be programmed (ISP) through UART interface	U502
Analog S/PDIF Outputs	Standard S/PDIF output connectors.	CN1001 CN1002
Host I2C Interface	Host Interface (I2C): This board includes a provision to access the STDP4320 device from an external host controller through the Host Interface (I2C port) connection.	CN701
GProbe	GProbe Interface (+5V logic): the board includes a GProbe connector that connects to the STDP4320 UART port for communication with external PC sources for debug and FW upgrade purposes.	CN501
Reset	Reset Button, when pressed, triggers a system master reset through the internal reset circuitry.	SW501
LED	One LED for indicating +5V input power-on status	Dxxx Reworked
Crystal	An external crystal of 27 MHz	Y501

5.2. Connector Descriptions

The RD5-4320 has the following connectors. The locations of these connectors are shown in the board picture in Figure 2.

CN301 – +5V Micro-USB female connector for supplying power to the board.

CN501 – GProbe Interface which connects to the UART port of the STDP4320. Use the Kinetic GProbe board and interface cable for connecting the board to an external PC that has GProbe software running.

Pin 1	+5V
Pin 2	GPROBE_TX
Pin 3	GPROBE_RX
Pin 4	GND

CN401 – DisplayPort input connector. Pin out details are shown below.

Pin 1	ML_L3N
Pin 2	GND
Pin 3	ML_L3P
Pin 4	ML_L2N
Pin 5	GND
Pin 6	ML_L2P
Pin 7	ML_L1N
Pin 8	GND
Pin 9	ML_L1P
Pin 10	ML_L0N
Pin 11	GND
Pin 12	ML_L0P
Pin 13	CONFIG1
Pin 14	CONFIG2
Pin 15	AUX_P
Pin 16	GND
Pin 17	AUX_N
Pin 18	HPD_OUT
Pin 19	GND
Pin 20	+3V3_AVDD

CN904, CN803 – HDMI output connectors. Pin out details are shown below.

Pin 1	HDMI_TX2+
Pin 2	GND
Pin 3	HDMI_TX2-
Pin 4	HDMI_TX1+
Pin 5	GND
Pin 6	HDMI_TX1-
Pin 7	HDMI_TX0+
Pin 8	GND
Pin 9	HDMI_TX0-
Pin 10	HDMI_TXC+
Pin 11	GND
Pin 12	HDMI_TXC-
Pin 13	CEC
Pin 14	Reserved - NC
Pin 15	SCL
Pin 16	SDA
Pin 17	GND
Pin 18	Power
Pin 19	HPD

CN1001, CN1002 – S/PDIF Output connectors. The pin out description is shown below.

Pin 1	GND
Pin 2	I2S_0
Pin 3	GND

CN701 – I2C Host Interface

Pin 1	I2C_SCL
Pin 2	I2C_SDA
Pin 3	IRQ_OUT
Pin 4	GND